To download this user manual in additional languages please visit our website's SERVICE-section – DYNAMICNORD.COM.






We love communities

f ○ ♥ V □ ♂

DYNAMICNORD.COM

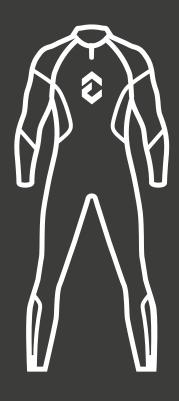

available for all genders

## Your Outdoor Companion



## Content

The wetsuits described in this user manual were manufactured according to the specifications prescribed by DYNAMICNORD. This user manual describes materials, construction, use, care, maintenance, repair and potential risks of using neoprene wetsuits for scuba diving.

Further information and the manual in other languages can be found on our website at **DYNAMIC**NORD.COM.

Register your product at **DYNAMIC**NORD.COM to receive all warranty services.

#### **Contact Service**

Mail support@dynamicnord.com

- 6 Size charts
- 10 Standard indication
- 10 Testing and certification body
- 10 Introduction and safety information
- 11 Weight amount
- 11 Specifications
- 12 Thermal performance class
- 12 Description of different models
- 12 Intended Use
- 13 Zippers
- 14 Zipper maintenance
- 14 Seams
- 14 Fit
- 15 Do not
- 16 Before the dive
- 16 After the dive
- 16 Risks
- 17 Ergonomics
- 18 Allergies
- 18 Cleaning and disinfection
- 18 Care instructions
- 19 Transport and storage
- 19 Useful life
- 19 Disposal
- 20 EC declaration of conformity
- 22 Manufacturing information






## Size chart

It is very important that you choose your size carefully. The wetsuit should be skintight. The neoprene must always be in contact with the skin because air pockets reduce thermal performance.

These size charts apply to all **DYNAMIC**NORD wetsuits.

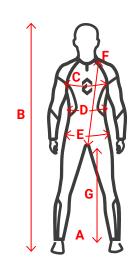

A. WEIGHT: As exact as possible

B. HEIGHT: From the crown to the floor

C. CHEST: The front surface between the neck and the stomach

D. WAIST: Circumference between ribs and hips

E. HIPS: Widest hip circumference

F. TORSO: Shoulder to crotch

G. LEG LENGTH: Inside leg, crotch to floor

#### WOMEN in cm/inch

height	<b>157-163</b> 5'2"-5'4"	<b>160-165</b> 5'3"-5'5"	<b>165-170</b> 5′5"-5′7"	<b>163-168</b> 5'4"-5'6"	<b>168-173</b> 5'7"-5'9"	<b>163-168</b> 5'4"-5'6"	<b>165-170</b> 5'5"-5'7"
chest	76-81	81-86	81-86	86-91	86-91	94-99	91-97
	30-32	32-34	32-34	34-36	34-36	37-39	36-38
	58-64	64-69	64-69	69-74	69-74	84-89	74-79
waist	23-25	25-27	25-27	27-29	27-29	33-35	29-31
	84-89	89-94	89-94	94-99	94-99	109-114	99-104
hips	33-35	35-37	35-37	37-39	37-39	43-45	39-41
	75	77	81	79	84	79	81
leg length	29 7/8	30 1/2	31 3/4	31 1/8	33	31 1/8	31 3/4
size	xs	s	ST	М	MT	M+	L


	<b>175-180</b> 5'9"-5'11"	<b>165-170</b> 5'5"-5'7"	<b>168-173</b> 5'6"-5'8"	<b>168-173</b> 5'6"-5'8"	<b>170-175</b> 5'7"-5'9"	<b>170-175</b> 5'7"-5'9"	<b>173-178</b> 5'8"-5'10"
-	<b>91-97</b> 36-38	<b>99-104</b> 39-41	<b>97-102</b> 38-40	<b>104-109</b> 41-43	<b>102-107</b> 40-42	<b>109-114</b> 43-45	<b>107-112</b> 42-44
-	74-79	89-94	79-84	84-99	84-89	99-104	89-94
-	29-31 <b>99-104</b>	35-37 <b>114-119</b>	31-33 <b>104-109</b>	37-39 <b>119-125</b>	33-35 <b>109-114</b>	39-41 <b>125-130</b>	35-37 <b>114-119</b>
-	39-41 <b>86</b>	45-47 <b>81</b>	41-43 <b>82</b>	47-49 <b>82</b>	43-45 <b>84</b>	49-51 <b>84</b>	45-47 <b>85</b>
-	34	31 3/4	32 3/8	32 3/8	33	33	33 5/8
	LT	L+	XL	XL+	2XL	2XL+	3XL



### Size chart

It is very important that you choose your size carefully. The wetsuit should be skintight. The neoprene must always be in contact with the skin because air pockets reduce thermal performance.

These size charts apply to all **DYNAMIC**NORD wetsuits.

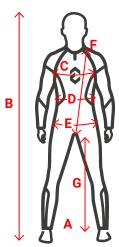

MEN	in cm/inch							
boight	157-167	168-173	173-178	180-184	168-173	178-183	183-188	170-175
height	5'2"-5'4"	5'6"-5'8"	5′8"-5′10"	5'11"-6'1"	5'6"-5'8"	5'10"-6'0"	6'0"-6'2"	5'7"-5'9"
chest	84-89	89-94	94-99	94-99	99-104	99-104	99-104	104-109
	33-35	35-37	37-39	37-39	39-41	39-41	39-41	41-43
waist	68-74	74-79	79-84	79-84	84-89	84-89	84-89	89-94
	27-29	29-31	31-33	31-33	33-35	33-35	33-35	35-37
la i a a	86-91	89-94	94-99	94-99	99-104	99-104	99-104	104-109
hips	34-36	35-37	37-39	37-39	39-41	39-41	39-41	41-43
torso	66	70	72	75	70	75	78	71
10150	25 7/8	27 3/8	28 3/8	29 5/8	27 5/8	29 3/8	30 5/8	28
log longth	72	76	79	81	77	81	84	77
leg length	28 1/2	30	31	32	30 1/4	32	33	30 1/2
weight kg	54-63	61-70	68-79	70-82	72-84	77-88	79-91	82-93
lbs	120-140	135-155	150-175	150-180	160-185	170-195	175-200	180-205
size	xs	s	М	МТ	MLS	ML	MLT	LS

A. WEIGHT: As exact as possible

B. HEIGHT: From the crown to the floor

C. CHEST: The front surface between the neck and the stomach

D. WAIST: Circumference between ribs and hips

E. HIPS: Widest hip circumference

F. TORSO: Shoulder to crotch

G. LEG LENGTH: Inside leg, crotch to floor

-								
180-185	185-191	173-178	183-188	188-193	173-178	185-191	188-193	191-196
5'11"-6'1"	6'1"-6'3"	5'8"-5'10"	6'0"-6'2"	6'2"-6'4"	5'8"-5'10"	6'1"-6'3"	6'2"-6'4"	6'3"-6'5"
104-109	104-109	109-114	109-114	109-114	114-119	114-119	119-124	124-129
41-43	41-43	43-45	43-45	43-45	45-47	45-47	47-49	49-51
89-94	89-94	94-99	94-99	94-99	99-104	99-104	104-109	109-114
35-37	35-37	37-39	37-39	37-39	39-41	39-41	41-43	43-45
104-109	104-109	109-114	109-114	109-114	114-119	114-119	119-124	124-129
41-43	41-43	43-45	43-45	43-45	45-47	45-47	47-49	49-51
76	79	71	78	81	72	79	81	82
30	31 1/4	28 1/8	30 5/8	31 7/8	28 1/2	31 1/4	31 7/8	32 3/8
83	85	79	84	86	79	85	86	87
32 1/2	33 1/2	31	33	34	31 1/4	33 1/2	34	34 1/2
86-98	88-100	91-102	95-107	98-109	100-111	104-116	113-125	122-134
190-215	195-220	200-225	210-235	215-240	220-245	230-255	250-275	270-295
L	LT	XLS	XL	XLT	2XLS	2XL	3XL	4XL



## **Standard indication**

This user manual meets the requirements of EN 14225-1:2017-06. The following certification body was assigned with testing and certification:

Vojenský technický ústav, s.p.Mladoboleslavská 944 Kbely, 197 00 Praha 9, Czech Republic Notified Body No. 2452

According to the tests of standard EN 14225-1:2017-06 our wetsuits with following designations were granted permission to carry the CE mark in connection with the test standard.

## **Testing and certification body**

Vojenský technický ústav, s.p.Mladoboleslavská 944 Kbely, 197 00 Praha 9, Czech Republic Notified Body No. 2452

## **Introduction and safety information**

Thank you for choosing a high-quality **DYNAMIC**NORD wetsuit which will ensure comfort and safety on all your diving adventures.

If you would like more information or have any questions not answered in this manual, please contact a **DYNAMIC**NORD authorized dealer or **DYNAMIC**NORD directly.



**NOTE: DYNAMIC**NORD RECOMMENDS THAT ALL DIVERS OBTAIN THE REQUIRED TRAINING AND LEARN TO USE THIS PRODUCT UNDER THE SUPERVISION OF A CERTIFIED INSTRUCTOR BEFORE USING IT UNDERWATER.

## Weight amount

The amount of trim weight must be sufficient to achieve neutral buoyancy while carrying an empty tank; more weight is not required. With the correct amount of trim weight, you should have neutral buoyancy at a depth of 3 meters to perform a safety stop for five minutes with a tank pressure of 30 bar (500 psi) or less.

## **Specifications**

This manual covers **DYNAMIC**NORD neoprene wetsuits, as well as protective clothing made from limestone neoprene, a special insulating material that reduces water circulation on the diver's skin and thus the loss of body heat. Our wetsuits are made from L-Foam neoprene. L-Foam is a formula that meets the most stringent testing requirements for polycyclic aromatic hydrocarbons (PAH). PAH is found in many elements, including petroleum-based products, and can be toxic in certain compounds. We are thrilled to offer this neoprene blend to better protect both our divers and our oceans. **DYNAMIC**NORD manufactures wetsuits in different thicknesses (0.5 - 7 mm) and designs to cover the different thermal conditions and areas of use. In general, a modern wetsuit is equipped with zippers that enable or facilitate donning and doffing it. Thermal insulation is classified according to the table below:



Thermal performance class	Water temperature ranges °C			
Α	7 to 12			
В	10 to 18			
С	16 to 24			
D	> 22			

According to the measurements performed by the notified body on date 21.01.2022, our suits fall into the following thermal performance classes:

3mm, SP-31/ SP-32: class C 5mm, SP-51/ SP-52: class B 7mm, SP-71/ SP-72: class B

## **Description of different models:**

#### SP-31 (men's model), SP-32 (women's model)

3mm neoprene suits with concealed back zipper, concealed arm and leg zippers. Short relief zipper at front neck.

#### SP-51 (men's model), SP-52 (women's model)

5mm neoprene suits with concealed back zipper, arm and leg zippers with inner glide-skin cuff. Short relief zipper at front neck.

#### SP-71 (men's model), SP-72 (women's model)

7mm neoprene suits with concealed back zipper, arm and leg zippers with inner glide-skin cuff. Short relief zipper at front neck.

#### **Intended Use**

The wetsuit is to be used as intended: This is the case when used to prevent hypothermia or hyperthermia during a dive or while in the water.



**ATTENTION**: DO NOT RELY ON A WETSUIT AS BUOYANCY CONTROL/SAFETY EQUIPMENT.

## **Zippers**

**DYNAMIC**NORD wetsuits are equipped with plastic zippers that may be positioned diagonally or vertically in the front or in the back or on top of the shoulders

Some of the thicker 5mm or 7mm models have additional zippers at the wrists and ankles to make them easier to don and doff. Front and back zippers are closed from bottom to top, while shoulder zippers are closed from left to right. This direction was chosen because the majority of people are right-handed, making it easier for them to close the zipper without damaging it. If your suit is equipped with a shoulder zipper, please ask your dive buddy to place a finger in front of the zipper slider when closing it. This will smooth out the neoprene which could jam the zipper.

Without this precaution, material could get caught between the zipper teeth. Before closing it, make sure the inner flap lies flat under the zipper. All zippers are equipped with gussets or flaps that reduce water circulation through the zipper. Outer flaps are secured with Velcro fasteners. Open and close the vertical zippers while standing: This prevents creasing along the zipper. To minimize the risk of damage, all shoulder zippers on the back should be closed with arms stretched out in front of you.

Make sure the zipper is pulled all the way to the stopper on the right side. If the zipper is not fully closed, water may enter and the zipper could open up.



## **Zipper maintenance**

Rinse the zipper with fresh water after each dive to prevent salt deposits which could jam the zipper.

#### Seams

The seams that join the panels of all 3mm or thicker wetsuits are blindstitched and sealed with glue and other substances to prevent water from seeping through the seams.

## Wetsuit fit

Wetsuits are designed to cling tightly to the diver's body. However, a wetsuit must not be too tight and restrict your movement or breathing. At the crotch, the wetsuit must neither be too tight nor too loose.

#### **Ensuring the correct fit**

Take a deep breath to ensure that the suit is not restricting chest movement. Check that you can put your hands over your head, touch your toes, and crouch and kneel without restriction. Use the measurements in the wetsuit size chart to determine the standard **DYNAMIC**NORD size that best suits you.

#### Donning the wetsuit with cuff and zipper

- $\rightarrow$  Lay the suit flat on the floor and visually inspect the suit to ensure it is in perfect condition.
- $\longrightarrow$  Remove all jewelry sharp edges can damage the glide-skin seals at the neck, wrists and ankles.
- → Open all zippers.
- $\longrightarrow$  If possible, sit down and put just one foot in the suit.
- $\longrightarrow$  Fold the ankle cuff neoprene (if any) away from the inner seals.
- → Take hold of the suit material in the calf area and carefully slip your foot through the lower opening. Pull the suit over your leg.
- $\longrightarrow$  Do the same with the other leg.
- → Take hold of the suit at the torso and pull the suit up to the waist so the crotch fits properly.

- → Fold the wrist cuff neoprene (if any) away from the inner seals.
- → Put one arm all the way into the sleeve, being careful not to damage the glide-skin seal when you put your hand through the opening.
- ightarrow Do the same with the other arm. Make sure the inner zipper flap lies flat, with no creases.
- → Make sure that the cuffs do not get caught in the zipper teeth or slider.
- → Using the wetsuit All **DYNAMIC**NORD wetsuit models are made from premium materials in accordance with the highest manufacturing standards. However, they must be used within reasonable limits.

#### Doffing the wet suit

- $\rightarrow$  Open all zippers.
- → Fold down the wetsuit at the top and pull it down, reversing it as you do so. This is easier when the suit is still wet. When you're done, the suit will be inside out.
- → After doffing it, turn it back the right way to let it dry.

### Do not

- → Exceed the maximum depth you are qualified for according to your diver certification.
- → Use the wetsuit in polluted or heavily contaminated environments or in toxic or hydrocarbon-enriched waters.
- $\longrightarrow$  Use the wetsuit as safety/buoyancy control equipment.
- $\longrightarrow$  Use the wetsuit with a weight belt or weight system that does not have a quick release buckle.



### Checks before the dive

Before EACH dive, ensure that the wetsuit is in good condition by inspecting the seams and looking for any visible damage to the material or components such as tears and holes. Make sure the zipper is working properly and is not damaged or prone to jam.

### Checks after the dive

After EACH dive, repeat the same pre-dive checks to find any new damage that may have occurred during the dive. If you find any damage, repair it as soon as possible or take your suit to an authorized **DYNAMIC**NORD dealer for repair.

# Risk assessment according to EU regulation 2016/426

Diving with a wetsuit bears a certain number of risks, just like other scuba diving activities. These include:

#### Hypothermia – Hyperthermia

Wetsuits are often used in extreme temperature conditions where either low air temperatures meet cold water or high air temperatures meet cold water. Knowing your thermal comfort zone is important to avoid hyperthermia or hypothermia.

A wetsuit offers excellent thermal protection, but it has its limitations. Your safety and enjoyment will depend on the combined effects of water temperature, exertion and your own body type.

When the body loses too much heat and the body temperature reaches dangerous levels, a condition called hypothermia sets in. Hyperthermia sets in when the body temperature rises above the normal range. When wearing a wetsuit, hyperthermia can develop during surface intervals in warm climates or when diving in warm, shallow waters at high levels of exertion. It is strongly recommended to always wear gloves, booties and a hood with the wetsuit when water temperatures may put the diver at risk of hypothermia. It is important to know your own limits and comfort zone. This allows you to recognize an uncomfortable situation as a

danger signal. Hypothermia and/or hyperthermia are both dangerous and potentially fatal conditions.

During all diving activities, you must continually monitor your efforts to prevent excess air consumption, fatigue, stress, overheating, or other risks. Please use the table below to determine which wetsuit model is best suited to your needs and typical water temperatures; see also the thermal protection class printed on the suit.

#### WETSUIT THERMAL PROTECTION CLASS

Thermal protection class of	Water temperature ranges			
Wet suit material	(°C/°F)_			
Α	7°C/45°F to 12°C/54°F			
В	10°C/50°F to 18°C/64,5°F			
С	16°C/60,8°F to 24°C/75,2°F			
D	> 22°C/72°F			

#### Change in buoyancy at depth

Neoprene, as used in diving products, is a closed-cell, foamed material with good insulating properties. With increasing depth, the increase in pressure causes the volume of these closed cells to decrease, resulting in reduced buoyancy at depth. NOTE: Compensating for the loss of buoyancy is one of the most important exercises that must be learned when using the wetsuit correctly.

#### Loss of thermal protection at depth

As the neoprene thins under pressure (see above), thermal protection is also reduced. Divers planning deeper dives should take this into account and accordingly wear additional, thicker or warmer suits.

## **Wetsuit ergonomics**

It is extremely important that the wetsuit sits correctly on the diver's body. In a loose wetsuit, water will circulate inside the suit, flowing in and out. The exchange of water between the inside and the outside of the suit results in much greater loss of heat than would be the case during normal use of the wetsuit material. It is important to choose the correct wetsuit size to prevent the formation of folds or "pockets" caused by excess



material. During the dive, these folds tend to pump water in and out of the suit. The neck, ankle, and wrist seals must reduce the flow of water without restricting blood flow to the hands, feet, or head. Restricting blood flow to the extremities can cause numbness, nitrogen build-up or lack of oxygen in the brain, with the risk of losing consciousness underwater.

## **Allergies**

It is known that a small proportion of the population suffers from allergic reactions when coming into contact with neoprene, polyester and nylon. Make sure you are not allergic to any of these materials before purchasing or donning a wetsuit containing these materials. If an allergic reaction has already occured, take off the wetsuit immediately and consult a doctor to avoid any health implications.

## Cleaning and disinfection

#### After EACH use of your wetsuit:

- → Rinse your suit inside and out with clean, fresh water.
- → Hang the suit so that the water can drain out of the suit.
- → Let the suit dry thoroughly inside and out in a shady place

#### **Care instructions**

Hand wash / Do not bleach / Dry on clothesline from dripping wet / Do not iron / Do not dry clean











80% NEOPRENE 20% NYI ON

## Storage and transport

Wetsuits are best hung on a wide hanger. Store the wetsuit in a dry, cool place away from direct sunlight. Transport wetsuits in bags specially designed for scuba gear to prevent over-folding of the suit and overcompression of the neoprene. Before packing, remove any dirt and sand.

#### **Useful life**

If you follow the care instructions above, you will be able to enjoy your **DYNAMIC**NORD wetsuit for years to come. The average useful life can range from 200 to 500 dives. Please note that depending on the duration and degree of use, the material of your wetsuit will become thinner, which in turn will reduce its insulating effect and a replacement is recommended to maintain your personal comfort during your dives.

## **Disposal**

When you need to dispose of the suit, please comply with local laws and regulations.



## **EU declaration of conformity**

#### Reference numbers and designation:

SP-31: 3mm men's wetsuit / SP-32: 3mm women's wetsuit SP-51: 5mm men's wetsuit / SP-52: 5mm women's wetsuit SP-71: 7mm men's wetsuit / SP-72: 7mm women's wetsuit

#### Manufacturer:

Fifth Element GmbH, Pettenkoferstr. 12, 83052 Bruckmühl – Germany

**Brand: DYNAMICNORD** 

The manufacturer Fifth Element GmbH is solely responsible for this EU declaration of conformity.

**EU regulation:** Regulation (EU) 2016/426 Personal Protective Equipment (PPE) EN14225-1:2017-06

**Risk category of PPE:** Category II in accordance with Annex I of Regulation (EU)2016/426 Personal Protective Equipment.

**Determination of conformity:** In accordance with the provisions of EU Regulation 2016/426 (PPE – Personal Protective Equipment) and with the harmonized standard EN14225-1:2017-06.

#### Applied CE certification:

Module B, according to regulation (EU)2016/426 Personal Protective Equipment (PPE), harmonized standard EN14225-1:2017-06

#### Testing carryied out by:

Vojenský technický ústav, s.p.Mladoboleslavská 944 Kbely, 197 00 Praha 9, Czech Republic Notified Body No. 2452

EU test certificate number: OOP-2452/EU-030/2021/061

Testing and certification body: Vojenský technický ústav, s.p.Mladoboleslavská 944 Kbely, 197 00 Praha 9, Czech Republic Notified Body No. 2452

**Applied Standard:** EN-14225-1:2017-6

Bruckmühl, dated 21.01.2022

For Fifth Element GmbH Martin Kusche (General Manager)

This declaration of conformity can also be found at WWW.

DYNAMICNORD.COM in the

Declarations of Conformity menu.



Model	
Date of production	
Date of purchase	
Dealer stamp	

## **Manufacturer**

You can find the manufacturing date of your suit on the label attached to the inside back of the suit.

#### Manufacturer

Fifth Element GmbH Pettenkoferstraße 12 83052 Bruckmühl / Germany